

Par Aide Master/Deluxe Ball Washer Lamp Assembly

Parts List

- 1 – Black 34" Pipe
- 1 – Par Aide Ball Washer
- 1 – Round Portable Base
- 2 – Tee Towels
 - 2 – Towel clips
- 1 – Allen wrench
- 1 – Allen screw
- 1 – Gasket (spare part)
- 1 – Ball washer drain plug wrench
- 1 – Clamp for base
 - 2 – Bolts
 - 2 – Nuts
- 3 – Base spikes (optional use for outdoor stability on turf)

Instructions

Step 1

Attach base clamp to underside of base using (2) bolts and (2) nuts (do not tighten).

Step 2

Insert pipe end (without small tapped hole) through top of base and into attached clamp. Tighten clamp onto pipe using a 1/2" wrench.

Step 3

Slide Ball Washer into or over top of pipe. For Master; place allen screw into hole at top of pipe and tighten to secure ball washer to pipe. For Deluxe; place allen screw in back of ball washer and tighten against pipe to secure.

With Floor lamp put end of pipe with small hole in it on the bottom.

To hang towels -- place towel clips in each hole at the bottom sides of ball washer and slightly pinch the clip with a pliers. Then attach towels through brass grommets.



Par Aide Master/Deluxe Ball Washer Ensemble

Parts List

- 1 – Black 3/4" Pipe
- 1 – Par Aide Ball Washer
- 1 – Round Portable Base
- 2 – Tee Towels
 - 2 – Towel clips
- 1 – Allen wrench
- 1 – Allen screw
- 1 – Gasket (spare part)
- 1 – Ball washer drain plug wrench
- 1 – Clamp for base
 - 2 – Bolts
 - 2 – Nuts
- 3 – Base spikes (optional use for outdoor stability on turf)

Instructions

Step 1

Attach base clamp to underside of base using (2) bolts and (2) nuts (do not tighten).

Step 2

Insert pipe end (without small tapped hole) through top of base and into attached clamp. Tighten clamp onto pipe using a 1/2" wrench.

Step 3

Slide Ball Washer into or over top of pipe. For Master; place allen screw into hole at top of pipe and tighten to secure ball washer to pipe. For Deluxe; place allen screw in back of ball washer and tighten against pipe to secure.

Additional Steps

To fill with water – simply raise agitator and add water through opening. To drain water (Master), remove ball washer from pipe by loosening Allen screw in pipe. Then use drain plug wrench to loosen drain plug on the bottom of ball washer. For Deluxe model, drain plug can be loosened on outside, and ball washer doesn't need be removed from pipe. It is recommended that the water be changed regularly to avoid getting stale.

To hang towels -- place towel clips in each hole at the bottom sides of ball washer and slightly pinch the clip with a pliers. Then attach towels through brass grommets.

(3) base spikes may be used on bottom of round base to stabilize ball washer if placed on grass.

Golf Galaxy
Customer Service Hours of Operation
Monday - Friday 8am - 8pm CST
Saturday: 8am - 5pm CST
1-800-287-9060
customerservice@golfgalaxy.com



WHEREVER GOLF IS PLAYED