


Par Aide Clock Kit

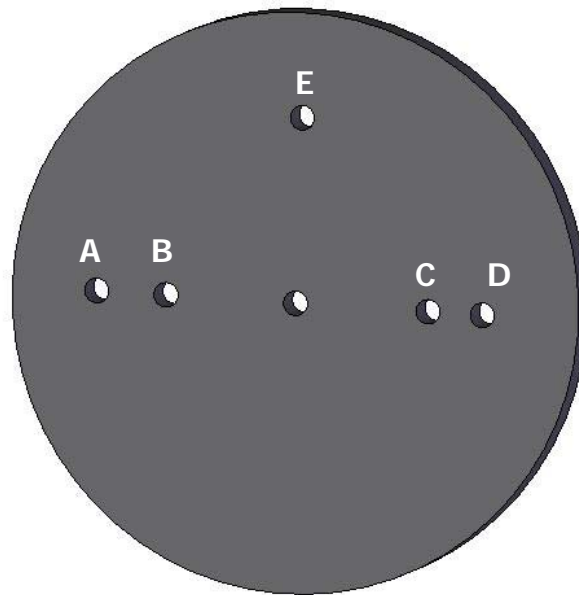

1. Remove clock face from the mounting board by turning the clock counter-clockwise to release.
2. Using the two mounting screws (included), mount the mounting board to the surface of your product. Use the following hole combinations in conjunction with the corresponding products in order to mount the clock on center, and horizontal:

3610 – Water Pro	A – E
3810 – Trash Pro 30	A – E
3820 – Trash Pro 10	B – C
3410 – Divot Pro	B – C
3310 – Range Pro	B – C
3200 – Tee Pro	A – D
3320/2 – Clock Pro	B – C
3. Use the “scored” horizontal line to assist you in mounting the unit square on the product.
4. Insert the AA battery and set the clock using the dial on clock mechanism.
5. To mount the clock face onto the mounting board, hold the clock face with the “12” in the 10:00 position (or “2” in the 12:00 position). Then fit the clock face onto the mounting bracket and turn clockwise to lock in place.

Warning: When turning the clock face onto the mounting bracket, be careful not to overturn and break the mounting bracket.