


Roller Kit Installation Instructions

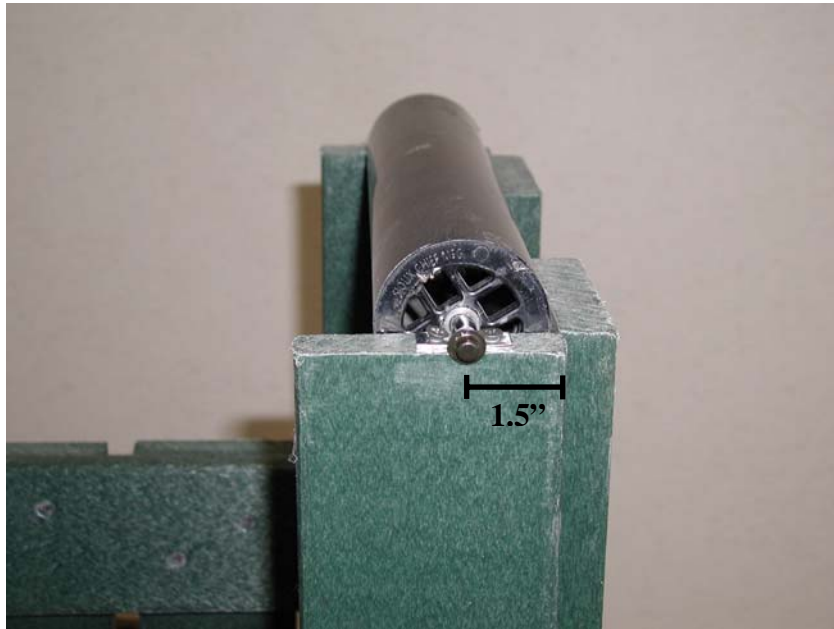

Step 1

Turn your Par Aide recycled plastic unit upside down

Step 2

Position the rollers on each leg so the metal rod is 1.5" in from the outside edge of the recycled plastic board

Step 3

Position "U" clamps over metal rods, and center on recycled plastic boards. Screw in "U" clamps over each metal rod to secure in place.

