


Tee Pro Installation Instructions

1) Removing the cover

Step 1 – The Tee Pro will come assembled with the cover secured. You will need to disengage the cover from the body to fill the Tee Pro with water and ball washer detergent



Step 2 – While holding the body of the Tee Pro with one hand, firmly strike the edge of the cover with the palm of your hand. Strike the side of the cover *opposite* the Par Aide logo. This will disengage the bracket, underneath the cover, from the four screw heads that hold the bracket in place.

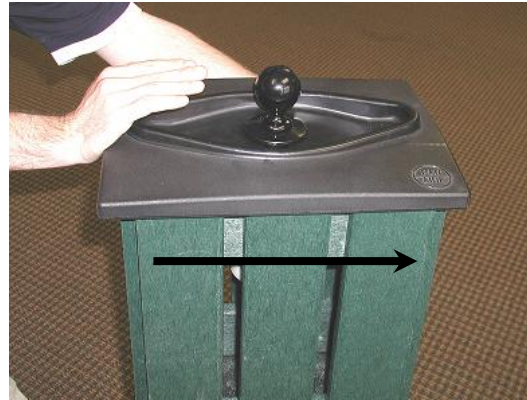

Step 3 – To reattach the cover, simply align the bracket with the screw heads and firmly slide the cover back into place. Push the cover from the same side as the Par Aide logo.



2) Installation

Single Post

- The single Tee Pro post is designed to be permanently cemented into the ground. To properly install, the post should be buried and cemented 13” into the ground, leaving 27” of the post above ground.
- After post is installed, attach the ball washer bracket to the bottom of the ball washer using the four carriage bolts provided. Note: nuts should be attached on the outside of the ball washer.
- Finally, attach ball washer to post using the screws provided.
- For towel clip – attach eyebolts between outside slats on either side or back of ball washer unit. Pre-drill holes using a 3/8” drill bit.

Double Post

- Center each side of the posts onto ball washer. Use the screws provided to fasten posts to ball washer.
- The double Tee Pro post is designed to be permanently cemented into the ground. To properly install, the posts should be buried and cemented 13” deep. This will leave 27” from the bottom of the ball washer to the ground.
- For towel clip – attach eyebolts between outside slats on either side or back of ball washer unit. Pre-drill holes using a 3/8” drill bit.